

ALLEN ORGAN
3-Manual Owner's Manual
AP-30/31, AP-40, DB-50/80, R320,
R340, R355, R380 & Her. III-64

Three-manual Consoles (AP-30/31, AP-40, DB-50/80, R320, R340, R355, R380 & Her. III-64)
Copyright © 2003 Allen Organ Company
All Rights Reserved

ALLEN ORGAN COMPANY

For more than sixty years--practically the entire history of electronic organs-- Allen Organ Company has built the finest organs that technology would allow.

In 1939, Allen built and marketed the world's first electronic oscillator organ. The tone generators for this instrument used two hundred forty-four vacuum tubes, contained about five thousand components, and weighed nearly three hundred pounds. Even with all this equipment, the specification included relatively few stops.

By 1959, Allen had replaced vacuum tubes in oscillator organs with transistors. Thousands of transistorized instruments were built, including some of the largest, most sophisticated oscillator organs ever designed.

Only a radical technological breakthrough could improve upon the performance of Allen's oscillator organs. Such a breakthrough came in conjunction with the United States Space Program in the form of highly advanced digital microcircuits. In 1971, Allen produced and sold the world's first musical instrument utilizing digitally sampled voices!

Your organ is significantly advanced since the first generation Allen digital instrument. Organs with Renaissance™ technology are the product of years of advancements in digital sound and control techniques by Allen Organ Company. This system represents the apex of digital technology applied to exacting musical tasks. The result is a musical instrument of remarkably advanced tone quality and performance.

Congratulations on the purchase of your new Allen Organ! You have acquired the most advanced electronic organ ever built, one that harnesses a sophisticated custom computer system to create and control beautiful organ sound. Familiarize yourself with the instrument by reading through this booklet.

Contents

I	Organ Stops	2
II	Specialized Stops	3
III	Expression and Crescendo Shoes	6
IV	Tutti I & II	6
V	Setting Pistons	7
VI	Artistic Registration	8
VII	Transposer	11
VIII	Virtual Acoustics	11
IX	Installation, Voicing and Organ Care	12
X	Safety Information	14
XI	Console Controller Guide	15
XII	Console Controller Addendum	A-1

I. ORGAN STOPS

PITCH FOOTAGE

The number appearing on each stop, along with its name, indicates the “pitch” or “register” of the particular stop. Organs can produce notes of different pitches from a single playing key. When this sound corresponds to the actual pitch of the played key, the stop is referred to as being of 8’ (eight foot) pitch; therefore, when an 8’ stop is selected and Middle C is depressed, the pitch heard is Middle C. If the sounds are an octave higher, it is called 4’ or octave pitch. If two octaves higher, it is called 2’ pitch. A stop sounding three octaves higher is at a 1’ pitch. Similarly, a 16’ stop sounds an octave lower and a 32’ stop two octaves lower.

Stops of 16’, 8’, 4’, 2’ and 1’ pitch all have octave relationships, that is, these whole numbered stops all sound at octaves of whatever key is depressed. Non-octave pitches are also used in organs. Their footage numbers contain a fraction and they are referred to as *Mutations*. Among these are the 2-2/3’ *Nasard*, 1-3/5’ *Tierce*, 1-1/3’ *Quintflöte* and 2-2/3’ *Twelfth*. Because they introduce unusual pitch relationships with respect to the 8’ tone, they are most effective when combined with other stops and used either in solo passages or in small ensembles of flutes.

TONAL FAMILIES

1. Flues

Organ tones divide into two main categories: *flues* and *reeds*. In pipe organs, flue pipes are those in which the sound is set in motion by wind striking directly on the edge of the mouth of the pipe. Flues include principal, flute and string tones. Compound stops and hybrid stops are variations within these three stop families.

The term “imitative” means that the organ stop imitates the sound of a corresponding orchestral instrument; for example, an imitative 8’ Viola stop sounds like an orchestral viola.

<u>Principal Voices</u> Principal, Diapason, Octave, Fifteenth, Quinte	Characteristic organ tones, not imitative of any orchestral instruments. Usually present at many pitches and in all divisions. Rich, warm and harmonically well developed.
<u>Flute Voices - Open:</u> Harmonic Flute, Koppleflöte, flute mutation stops <u>Flute Voices - Stopped:</u> Holzgedackt, Bourdon, Lieblichgedackt, Rohr Bourdon	Lesser harmonic development than Principals. Open flutes are somewhat imitative; stopped flutes are not. Present at all pitch levels and in all divisions.
<u>String Voices</u> Gamba, Salicional, Viole Céleste	Mildly imitative and brighter harmonic development than Principals. Usually appear at 8’ first; can be 4’ & 16’ ranks.

<u>Compound Voices</u> Mixture, Fourniture	Voices produced by more than one rank sounding simultaneously. Best registered with other stops.
<u>Hybrid Voices</u> Erzähler, Spitzflöte	Voices that combine the tonal characteristic of two families of sound, e.g., flutes and principals, or strings and principals.

2. Reeds

In *reed* pipes, a metal tongue vibrates against an open flattened side of a metal tube called a shallot. The characteristic sounds of different reeds are produced through resonators of different shapes. The family of reeds subdivides as follows:

<u>Chorus or Ensemble:</u> Double Trumpet, Tromba, Posaune, Clarion, Bombard	Voices of great harmonic development; some are imitative of their orchestral counterparts.
<u>Solo:</u> Hautbois, Clarinet, Krummhorn	

Your Allen Organ provides authentic, digitally sampled voices. They are protected by copyrights owned by the Allen Organ Company and are stored in memory devices, each having affixed to it a copyright notice; e.g., © 2003 AOCO, © 2001 AOCO, etc., pursuant to Title 17 of the United States Code, Section 101 et seq.

II. SPECIALIZED STOP CONTROLS

Some organ stop controls do not turn voices on/off, but instead turn on/off console functions such as outlined in this Section. **Note:** This Section includes a general listing of stop controls found on three-manual organs. Not all of these controls are included in every Allen Organ. For example the AP-30, AP-31 and R320 do not include Octave Couplers or all of the Second Voices controls.

Tremulant	This stop provides a vibrato effect within the division, natural in the human voice and wind instruments. It can be engaged along with the <i>Tremulants Full</i> stop to create the largest tremulant sounds.
Tremulants Full	When engaged along with one or more of the Divisional Tremulant stops, this control causes the Divisional Tremulant to become less subtle and much deeper in their undulations. This is more extreme than the human voice vibrato, is useful for Gospel or theatre style.
English Swell	Engaged along with stop control having red italicized additional voice names located in Swell Division. Engaging this stop lets the English style voice qualities of the secondary red italicized voices sound.
Gt-Pd 2 nd Voices	Engaged along with stop control having red italicized additional voice names located in the Great and Pedal Divisions. This lets the voice qualities of the secondary red italicized voices to be heard.
Gt-Ped Unenclosed	When engaged, the Great Choir Pedal Shoe will express only the Choir Division. Also, the expression control for the Great and Pedal Divisions

is disabled, causing the Great and Pedal stops to sound at full volume, regardless of the position of the Great-Choir-Pedal expression shoe.

Choir Unenclosed	When engaged, the Great Choir Pedal Shoe will express only the Great and Pedal Divisions. Also, the expression control for the Choir Division is disabled, causing the Choir stops to sound at full volume, regardless of the position of the Great-Choir-Pedal expression shoe.
All Swells to Swell	When engaged, it allows all voices to be expressed from the Swell Division's Expression Shoe. This shoe is located second from the left.
Bass Coupler	When drawn, the lowest note played on the Great Division manual also plays all stops drawn in the Pedal Division. Voices normally played from the pedalboard will be heard without using the pedals.
Melody Coupler Ch>Gt	When engaged while playing on the Great manual, the highest note played automatically plays all engaged Choir Division stops in addition to those drawn on the Great. By choosing a Choir stop such as the 8' Cromorne, the melody played by the top note on the Great is accentuated.
Manual Transfer Gt>Ch	Exchanges stops and Divisional Pistons in the Great and Choir Divisions so the stops from the Great Division are played from the bottom Choir Manual and the stops from the Choir Division are played from Great manual.
Alternate Tuning	When activated, the organ's tuning temperament changes to the alternate tuning that has been selected from the Console Controller™. See the Console Controller Guide later in this Manual for more information about Alternate Tunings.
Gt-Pd Mains Off	To be used along with the <i>Gt-Pd to Antiphonal</i> stop control. When engaged, this disables the Great and Pedal Division's main speakers. If this stop is engaged and the <i>Gt-Pd to Antiphonal</i> stop is not engaged, the Great and Pedal Division voices will not sound.
Note: The AP-30 & AP-31 do not include Antiphonal stop controls. Optional Selector Switches are available that are located under the console apron.	
Gt-Pd to Antiphonal	This stop control makes the Great and Pedal Division voices speak from optional Antiphonal speakers (if they are present). If <i>Gt-Pd Mains Off</i> is not engaged, the Great and Pedal voices speak from both main and antiphonal speakers. If <i>Gt-Pd Mains Off</i> is engaged, Great and Pedal voices speak from the Antiphonal Division's speakers only.
Choir Mains Off	Used along with the <i>Choir to Antiphonal</i> stop and disables the Choir Division's main speakers. If engaged and the <i>Choir to Antiphonal</i> stop is not, the Choir Division voices will not sound.
Choir to Antiphonal	This stop control makes the Choir Division voices speak from the optional Antiphonal speakers (if present). If the <i>Choir Mains Off</i> is not engaged, the Choir voices speak from both main and antiphonal speakers. If <i>Choir Mains Off</i> is engaged, Choir voices speak from the Choir antiphonal speakers only.

Swell Mains Off	Used along with the <i>Swell to Antiphonal</i> stop and it disables the Swell Division's main speakers. If engaged and the <i>Swell to Antiphonal</i> stop is not engaged, Swell Division voices will not sound.
Swell to Antiphonal	This stop makes the Swell division speak from optional Antiphonal speakers (if present). If the <i>Swell Mains Off</i> stop is not engaged, the Swell voices speak from both main and antiphonal speakers. If the <i>Swell Mains Off</i> is engaged, Swell voices speak from the Swell antiphonal division only.
4' Swell	This is the Swell Division Octave Coupler. It makes Swell voices speak one octave higher than the pitch indicated.
Unison Off	Turns off stops in the Swell Division at the pitch level at which they are drawn, while allowing them to speak at octave and sub-octave pitch levels when the octave (4') and sub-octave (16') couplers are drawn.
Solo Main Off (R380/DB80)	Turns off speaker cabinets for the Solo division.
Solo to Ant. (R380/DB80)	Allows the Solo division to play through the Antiphonal speaker cabinets.
16' Swell	This is the Swell Division Sub-Octave Coupler. It makes Swell voices speak one octave lower than the pitch indicated.

COUPLERS (AP-30, AP-31 and R320 do not include Octave Couplers)

8' Great to Pedal	Connects all Great Division voices to the pedalboard at the pitch indicated on the Great stops.
4' Great to Pedal	Connects all Great Division voices to the pedalboard an octave higher than indicated on the Great stops.
8' Swell to Pedal	Connects all Swell Division voices to the pedalboard at the pitch indicated on the Swell stops.
4' Swell to Pedal	Connects all Swell Division voices to the pedalboard an octave higher in pitch than the Swell stop indicates.
8' Choir to Pedal	Connects all Choir Division voices to the pedalboard at the pitch indicated on the Choir stops.
16' Swell to Great	Intermanual coupler connecting most Swell stops to the Great manual at an octave lower than indicated.
8' Swell to Great	Intermanual coupler connecting most Swell stops to the Great manual at the Swell stop's indicated pitch.
4' Swell to Great	Intermanual coupler connecting most Swell stops to the Great manual at an octave higher than indicated.
8' Choir to Great	Intermanual coupler connecting all Choir stops to the Great manual at the Choir stop's indicated pitch.
16' Swell to Choir	Intermanual coupler connecting most Swell stops to the Choir manual at an octave lower than indicated.

8' Swell to Choir	Intermanual coupler connecting most Swell stops to the Choir manual at the Swell stop's indicated pitch.
4' Swell to Choir	Intermanual coupler connecting most Swell stops to the Choir manual on octave higher than indicated.
Choir Unison Off	Turns off all Choir stops on the Choir manual. Stops coupled into the Choir from other divisions continue to sound from the Choir manual. Also, Choir Division stops coupled to other manuals or the pedalboard continue to sound.
MIDI On Pedal	Lets pedalboard transmit MIDI information.
MIDI On Great	Lets Great manual transmit MIDI information
MIDI On Swell	Lets Swell manual transmit MIDI information.
MIDI On Choir	Lets Choir manual transmit MIDI information.

III. EXPRESSION & CRESCENDO SHOES (Volume Control Pedals)

The organ's three control pedals (called "shoes") control expression and crescendo. (**Note:** R380 has four shoes.)

- ❑ The left-hand side, expresses the Great, Choir and Pedal Divisions.
- ❑ The next shoe expresses the Swell Division. It affects the loudness of Swell Division voices; unless, the *All Swells to Swell* stop is engaged -- then it controls the loudness of all voices.
- ❑ **(R380/DB80)** The next shoe, expresses Solo Division.
- ❑ The right-hand shoe is the Crescendo shoe. It is a master Crescendo for all divisions. It gradually adds stops as it is opened. Sequential green, yellow and red lights on the organ's bar graph indicator display relative pedal position. Indiscriminate use of the Crescendo, in lieu of careful registration, should be avoided.

The B Crescendo thumb piston is associated with the Crescendo shoe. Crescendo B accesses a second set of Crescendo registrations that can be different from the standard Crescendo registrations. See the Console Controller Guide later in this Manual for more information relating to changing the registration settings of this secondary Crescendo.

IV. TUTTI I and TUTTI II

The Tutti I and II pistons are sets for full organ registrations. Tutti II has a larger, louder registration, than Tutti I. These Tuttis are turned on and off by pressing manual thumb pistons located beneath the Great manual and directly above the *Cancel* piston. The pistons are "toggled" meaning that pressing them a second time reverses the ON or OFF setting of the corresponding Tutti. The *Cancel* piston button also turns OFF the Tuttis.

Red signal lights illuminate when Tutti I or II is in operation. These lights are labeled and located on a Bar Graph Indicator. A second set of Tuttis can be programmed by the organist. Like the Crescendo, indiscriminate use of Tuttis should be avoided. See the Console Controller Guide later in this Manual for more information relating to changing secondary Tuttis settings.

V. SETTING PISTONS

SETTING GENERAL PISTONS

Your Allen organ's capture system lets you set stop registration combinations in each of its memories. The General pistons are located on the left-hand side of the console under the Swell and Great manuals. (**Note:** The R355, R380 and DB80 also include General pistons under the Choir division.)

- ❑ First, select and depress the stops you wish to save.
- ❑ Press and hold the SET Piston.
- ❑ Press and release the desired GENERAL piston.
- ❑ Finally, release the SET Piston.

Remember, the General pistons are customarily set from soft to loud using graduated stop combinations. The pistons you have set "remembers" the registration combinations that you have assigned to each of them. Each time a General piston is pressed, the registration assigned to it is activated. You can change stop registration combinations at any time by repeating the above procedures.

SETTING DIVISIONAL PISTONS

The organ has Divisional pistons in addition to General pistons. The piston setting process in each case is the same as SETTING GENERAL PISTONS described above. Only Swell stops can be set with the Swell Divisional pistons; Great stops with the Great Divisional pistons and Choir stops with the Choir Divisional pistons.

The *MIDI on Pedal*, *MIDI on Swell*, *MIDI on Great* and *MIDI on Choir* stops can be set on either Divisional or General pistons. The *Swell to Pedal*, *Great to Pedal*, *Choir to Pedal*, as well as *Swell to Great*, *Choir to Great* and *Swell to Choir* couplers can only be set on General Pistons. These rules can be modified if you wish to reconfigure the pistons. See the Console Controller Guide later in this Manual for more information relating to reconfigure pistons.

SETTING TOE PISTONS (STUDS)

Stop registration combinations may be set and drawn by toe studs, as well as by pistons. Toe Studs, located on each side of the Expression and Crescendo shoes, are set in the same manner as thumb pistons. The Toe Studs on the left are duplicates of General Pistons. The Toe Studs on the right are Pedal Divisional Toe Studs. To set a Pedal Divisional Toe Stud:

- ❑ Select the desired Pedal stops.
- ❑ Hold the SET button, and momentarily press the desired Pedal Toe Stud.
- ❑ Finally, release the SET button.

When you set a General Piston, that combination is set automatically on the Toe Stud of the same number. That is, setting General Piston 3 also places its combination on General Toe Stud 3.

Note: Organ's capture system is not operable until about six seconds after the organ is turned on.

RECALL PISTON

The "R" Piston recalls the last combination set prior to using any General or Divisional piston.

VI. ARTISTIC REGISTRATION

(Trained organists might not need to review this section.)

Organ registrations fall into two broad categories: *solo registrations* and *ensembles*.

SOLO REGISTRATION

A *solo registration* is one for which a melody can be played on one keyboard, the accompaniment part played on another keyboard, and the pedal often provides a supportive bass line. Almost any stop or combination of stops can sound good as a solo voice. A contrasting tone quality should be chosen for the accompaniment so it is softer than the solo voice. Pedal stops should provide a foundation for the sound without being too loud. This is accomplished by adjusting each division's loudness with the expression shoes.

Most 8' reed stops make interesting solo voices. Adding a 4' flute or a flute mutation (for example, Nasard or Tierce) to a reed, such as the Trumpet, colors the sound and increases its volume slightly. Adding an 8' flute to a reed adds body and fullness to the reed's tone.

Flutes can be used alone or in combinations as solo voices. One special combination of flutes that creates an appealing and historically significant solo combination is the Cornet (pronounced kor-NAY). The Cornet is created by using the following Swell stops: 8' Bourdon, 4' Traverse Flute, 2-2/3' Nasard, 2' Piccolo and 1-3/5' Tierce. This solo combination was used widely in Baroque organ music, but it is just as appropriate for some modern music. Useful variations of the Cornet may be achieved by eliminating the 4', the 2', or both.

When choosing stops for a solo voice, it's not always necessary to include an 8' stop. For example, because a 4' flute tone quality differs from that of an 8' flute, the 4' flute can be used as an independent solo voice. By playing the solo an octave lower than written, the notes sound at the correct pitch. In similar fashion, a 16' stop can be selected and the notes played an octave higher than written. Because each stop has its own tone color, tonal variety is gained and the musical results become more interesting.

For accompaniment, the most desirable voices are the 8' flutes or strings on each manual. Celestes often make effective accompaniments. The correct choice depends on the loudness of the solo tone (a soft solo voice requires the softest accompaniment stop), the element of contrast, and the location of the solo stop. A bright, harmonically rich solo reed, for example, can be accompanied by either a string or flute, though the flute often contributes greater interest because of its greater contrast.

Try to seek a natural balance of volume between solo and accompaniment. This can be easily accomplished because the solo and accompaniment are under separate expression.

SUGGESTED SOLO REGISTRATIONS

CHIMES SOLO

Swell: Bourdon 8' or Voix Celeste 8', Salicional 8'
Great: Chimes
Choir: Viole 8' and Viole Celeste 8', Swell to Choir 8'
Pedal: Bourdon doux (Sw) 16', Swell to Pedal 8'
Play solo on Great and accompaniment on Swell or Choir

SWELL CORNET SOLO COMBINATION

Swell: Bourdon 8', Traverse Flute 4', Nasard 2-2/3', Piccolo 2', Tierce 1-3/5'
Great: Gamba 8'
Choir: Viole 8'
Pedal: Bourdon doux 16', Gedacktflöte 8'
Play solo melody on Swell and accompaniment on Great or Choir.

TRUMPET SOLO

Swell: Salicional 8', Bourdon 8', Traverse Flute 4',
Choir: Trompetta Real 8'
Great: Diapason 8', Gamba 8', Octave 4', Swell to Great 8'
Pedal: Contre Bourdon 32', Bourdon 16', Violone 16', Octave 8',
8' Swell to Pedal
Play melody on Choir and accompaniment on Great.

These few combinations demonstrate basic techniques of solo registration. In creating registrations of your own, remember these three simple rules:

- ❑ Seek tonal contrast between solo voice and accompaniment.
- ❑ Be sure the solo is louder than the accompaniment.
- ❑ Choose a solo whose character is appropriate to the specific piece.

ENSEMBLE REGISTRATION

Ensemble registrations involve groups of stops that are played together; usually, but not always with both hands on one keyboard. They are characterized by compatibility of tone, clarity, and occasionally power. Such registrations are used in hymn singing, choir anthem accompaniments, and much of the contrapuntal organ literature.

Volumes have been written on the subject of ensemble registration; here is a summary of the major points. Ensembles are created by combining stops. Two factors need to always be considered: tone quality and pitch. Ensembles begin with a few stops at the 8' and/or 4' pitch and expand "outward" in pitch as they build up. New pitches are added in preference to another 8' stop.

Ensembles are generally divided into three ensemble groupings called "choruses":

- ❑ The Principal Chorus is the most fully developed, using foundation voices of various divisions at every pitch from 16' Diapason to high multiple rank mixtures. The Principal Chorus is sometimes called the "narrow-scale flue chorus" because of principal pipes' relative thinness in relation to their length.
- ❑ The Flute Chorus is also represented with a diversity of stops at various pitches. Generally, the Flute Chorus is composed of less harmonically developed tones, and is smoother and not as loud as the Principal Chorus. The Flute Chorus is sometimes called the wide-scale flue chorus, owing to the generally "fatter" look of flute pipes as compared to principals.
- ❑ The Reed Chorus includes those reed tones designed to be used in the ensemble buildup. Not all reed voices are ensemble tones. An Oboe, for example, is usually a solo stop. The various Trumpets, Tromba, Clairons,

Posaune, Bombarde, etc., are usually ensemble voices that add brilliance, power, and incisiveness to the sound.

Another special ensemble combination is the Cornet described previously. This combination can be used with the chorus reeds and mutations to create the “Grand Jeu.” The Cornet is also useful in Romantic ensembles to add weight and thickness to the sound.

SUGGESTED ENSEMBLE REGISTRATIONS

GREAT DIVISION

1. Harmonic Flute 8', Spitz Flute 4'
2. Diapason 8', Octave 4'
3. Diapason 8', Gamba 8', Octave 4',
4. Diapason 8', Gamba 8', Octave 4', Fifteenth 2'
5. Diapason 8', Gamba 8', Octave 4', Fifteenth 2', Mixture IV
6. Diapason 8', Harmonic Flute 8', Octave 4', Spitz Flute 4', Fifteenth 2', Mixture IV
7. Diapason 8', Harmonic Flute 8', Octave 4', Spitz Flute 4', Fifteenth 2', Mixture IV, Tromba 8'

SWELL DIVISION

1. Bourdon 8', Salicional 8'
2. Bourdon 8', Salicional 8', Traverse Flute 4'
3. Bourdon 8', Salicional 8', Traverse Flute 4', Piccolo 2'
4. Bourdon 8', Salicional 8', Octave Geigen 4', Traverse Flute 4', Piccolo 2'
5. Bourdon 8', Salicional 8', Octave Geigen 4', Traverse Flute 4', Piccolo 2', Fourniture IV
6. Bourdon 8', Salicional 8', Octave Geigen 4', Traverse Flute 4', Piccolo 2', Fourniture IV, Contre Trompette 16', Trompette 8'

The 8' *Swell to Great* coupler allows various ensembles to be combined on the Great manual. For example, when the #5 Great and #3 Swell registrations are coupled and played on the Great, they form a nice round hymn combination.

CHOIR DIVISION ENSEMBLE REGISTRATIONS

1. Viole 8', Holzgedackt 8'
2. Viole 8', Holzgedackt 8', Koppelflöte 4'
3. Viole 8', Holzgedackt 8', Koppelflöte 4', Prinzipal 4'
4. Viole 8', Holzgedackt 8', Koppelflöte 4', Prinzipal 4', Oktav 2'
5. Viole 8', Holzgedackt 8', Koppelflöte 4', Prinzipal 4', Oktav 2', Cymbale III

Pedal ensembles are created in much the same way as manual ensembles, except starting at 16' pitch instead of 8'. Pedal voices should not be louder than the manual voices. Although the manual to pedal couplers are useful in bringing clarity to the pedal line, especially on softer registrations, avoid constantly relying on one or two 16' stops along with a coupler. Note: the softest stops and flute mutations are normally not included when building ensemble registrations.

FULL ORGAN

Every organ stop and coupler could be used simultaneously; however, good registration practice is such that the organist would not haphazardly engage every stop. Listen and include only those stops that really contribute to the fullness and brilliance of the ensemble. Eliminate soft stops and solo stops that make no purposeful contribution.

This short treatment barely scratches the surface of organ registration and playing. For further insight into this vital area of organ playing, we recommend the following texts:

Audsley, George Ashdown. *Organ Stops and their Artistic Registration*.

Hialeah, FL: C.P.P. Belwin, 1985.

Irwin, Stevens. *Dictionary of Pipe Organ Stops*. 2nd ed.

New York, NY: Macmillan Books, 1983.

Cherrington, Dr. Sally. *A Church Organist's Primer*. Volumes I, II, & III.

Allen Organ Company. Video Materials, 1996/1997.

AOC P/N: 031-0047, 031-0065, 031-0012

VII. TRANSPOSER

The organ can perform the difficult task of transposing, while allowing the organist to play in the noted key. Operation of the Transposer is controlled by the Transposer knob found on the face of the Console Controller™. Neutral (no transposition) position for the knob is marked “●.” To shift the music to a higher key, rotate the knob counter-clockwise. The key can be raised a maximum of five half-steps and can be lowered a total of seven half-steps.

A RED INDICATOR LIGHT COMES ON WHENEVER THE TRANSPOSER KNOB IS MOVED FROM THE NEUTRAL (“●”) POSITION. This is to warn the organist that the instrument is not ready to play in the same key as when in the Neutral position. It is a good habit to operate the organ with the Console Controller™ drawer open.

Why Transpose?

- ❑ Because a song's range does not always suit the vocal range of a particular singer. By adjusting the Transposer, the piece can be sung more comfortably and effectively.
- ❑ Because some instruments are non-concert pitch. A trumpet in B^b, for example, can play the same music as the organist, if the Transposer knob is set two half-steps lower.
- ❑ Because hymn singing can sometimes be improved by a more favorable key selection.

VIII. VIRTUAL ACOUSTICS™

The Virtual Acoustic™ system provides the spatial ambiance of various size reverberant rooms. Although most noticeable and effective in non-reverberant environments, this system enhances sound even in better acoustic settings.

There are 21 selectable reverb pallets. One is the DEFAULT setting that is not adjustable. The other 20 acoustic styles are selectable and adjustable. They allow an organist to modify the sound of the organ to accommodate a room's changing acoustical properties. (e.g., a room's reverberation characteristics change as the number of people present changes.)

The switch labeled VIRTUAL ACOUSTICS™ on the face of the Console Controller™ must be ON to hear the default reverberation setting or one of the 20 customized virtual acoustic selections.

The amount of reverb can be changed on the 20 customized selections and is shown in dB (decibels). The range of control is from 0 dB to -30 dB. -30 dB is the least amount of reverb and 0 dB is the most reverb available.

IX. INSTALLATION, VOICING AND ORGAN CARE

INSTALLATION

Wherever your organ may be situated, careful installation is a prerequisite to achieving the most successful results. Your Allen representative is well qualified to guide you in planning this. Allen Organ factory assistance with planning the installation is available and may be sought by your local Allen representative. Once the organ is installed, be mindful of any acoustical changes made to the room it is located in. When changes that affect acoustics occur, your Allen Organ representative should be notified.

Bass frequency projection is strongly affected by speaker cabinet location. Although none of the speaker cabinets should ever be moved once the installation is completed, extra care should be exercised to prevent inadvertent movement of the bass tone cabinets. When sound chambers have been utilized to house speaker cabinets, make sure they are not later used as storage closets. Placing sound absorbent materials (choir robes, flowers, etc.) damages the organ's sound quality. Metal objects stored in the organ's sound chambers can vibrate and create unpleasant noises.

VOICING

Your organ has unprecedented accuracy in the scaling and voicing of each note of every stop. Should you require these parameters be changed, your Allen Organ representative is able to help make such changes. Final adjustments in scaling and voicing involve procedures that should be left to an expert. These adjustments normally are a part of installation, and once done, should not require changes. If the organ is moved to a new location or major changes are made to the acoustical properties of the room, the instrument may need to be tonally refinished.

CLEANING AND POLISHING

Your Allen Organ constitutes a major advance in long-term maintenance-free operation. No regular maintenance procedures are required.

Reasonable care will keep the organ looking beautiful for years to come. The wood surfaces may be cleaned using a soft cloth dampened with lukewarm water. A mild solution of lukewarm water and furniture soap may be used to remove fingerprints, etc. Polish dry with a soft cloth so that the wood surface is not wet.

Never use wax, sprays or oils on the finish. Satin finished surfaces take on a semi-gloss appearance when waxed and will eventually become yellowed. If you need to "polish" the organ for a special event, use only a very high quality wood furniture polish.

Never use soap or detergents on keys or stops. Keys and stops should be cleaned using two soft, clean cloths. Immerse one in clear, lukewarm water and wring it thoroughly to a damp dry. Loosen any dirt with this cloth and then polish with the dry cloth.

To polish the clear music rack, a furniture wax polish may be sprayed on a soft dry cloth and rubbed on the front of the music rack. Keep the wax off of the wood finishes. This will help keep the music rack clear.

BATTERY BACKUP SYSTEM

A Lithium battery sustains the memory for the capture system on your Allen Organ. This allows capture settings and related items to be retained in memory when the organ is switched off or unplugged. Under normal circumstances, the Lithium battery should last for several years. A built-in warning system alerts you when the battery becomes weak and needs to be replaced. You need to have the Console Controller™ drawer open before the organ is turned on. If there is a problem, the window displays:

WARNING !!
REPLACE BATTERY!

This message displays for only six seconds or so after the organ is switched on; so, this is why the Console Controller™ drawer should be opened *before* turning the organ ON. Should the battery in your organ require replacement, contact your local authorized Allen Organ service representative.

Welcome to the family of satisfied Allen Organ owners!

Warning: This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause interference to radio communications. It has been type tested and found to comply with the limits for a Class B Computing Device in accordance with the specifications in Subpart J of Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference in a residential installation. Should this equipment cause interference to radio communications, the user at his own expense will be required to take whatever measures may be necessary to correct the interference. Whether this equipment actually causes the interference to radio communications can be determined by turning the equipment OFF and ON. The user is encouraged to attempt to correct the interference by one or more of the following measures:

- Reorient the receiving antenna.
- Relocate the receiver with respect to the organ's location.
- Plug the organ into a different electrical outlet, so that the organ and receiver are on different AC branch circuits.

If necessary, the Allen Organ dealer or an experienced radio technician should be consulted for additional suggestions.

CE mark shows compliance with the EMC Directive

X. SAFETY INFORMATION

USA ONLY

CAUTION

Never plug the instrument into any current source other than 110 to 120 volts, 50/60 Hertz alternating current (AC). A verified grounded outlet is essential to proper operation and protection of the instrument. Proper polarity should be checked with an AC circuit analyzer before connecting the organ.

Do not change the cable plug or remove the ground pin or connect with a two-pole ground lift adapter.

If you are in doubt about your electrical connection, consult your local electrician or power company.

In facilities where circuit breakers are turned off between uses (as for example, between worship services), the circuit breaker affecting the organ console AC power should have a guard installed to prevent it from accidentally being switched off.

It is important that you read and comply with all instructions and labels that might be attached to the instrument.

INTERNATIONAL ONLY

CAUTION

Do not plug the instrument into any current source other than that stated by the selling dealer. Proper polarity should be checked with an AC circuit analyzer before connecting the organ.

Do not change the cable plug or remove the ground pin (if applicable).

If you are in doubt about your electrical connection, consult your local electrician or power company.

In facilities where circuit breakers are turned off between uses (as for example, between worship services), the circuit breaker affecting the organ console AC power should have a guard installed to prevent its being accidentally switched off.

Read and comply with all instructions and labels that may be attached to the instrument.

CONSOLE CONTROLLER™ GUIDE

Note: This Guide is designed to serve various Console Controller software versions. As a result, there may be variations in the way a particular Console Controller operates.

A. BASIC OPERATION	16
1. Start-Up Sequence	
2. Advancing Through the Windows	
3. Selecting the Capture Memories	
4. Saving Registrations Using Pistons and Toe Studs	
5. Locking Capture Memories	
6. Unlocking Memories Using Your Code	
7. Unlocking Memories-Even If You Forget Your Code	
8. Setting the Clock	
9. Stop Action and Capture Self Check	
10. Virtual Acoustics Settings	
B. ADVANCED OPERATION	21
1. Selecting an Alternate Tuning	
2. Configuring Divisional and General Pistons	
3. Modifying the Crescendo and Tuttis	
4. Restoring Original Factory Settings	
5. Sostenuto	
6. Global Tuning	
C. MIDI FUNCTIONS	26
1. Standard MIDI Channel Assignment	
2. Selecting Program Change Modes	
3. GENERAL MIDI Sound Names or Program Numbers	
4. Assigning MIDI Program Changes to the Pistons	
5. MIDI Bank Selecting	
6. Changing the MIDI Base Channel	
7. MIDI Expression Settings	
8. MIDI Sustain Kick Switch	
9. Transferring and Saving Capture Data to a Sequencer	
10. Return Capture Memory Data From a Sequencer	
11. Transmitting Stop Data	
D. PERFORMANCE RECORDER™	34
1. Selecting Record/Play-Back Modes	
2. To Start Recording	
3. To Playback a Recording	
4. Positioning the Counter Number	
5. Changing Playback Speed	
6. Recording an External MIDI Device	
7. Returning to the First Window	
E. QUICK REFERENCE GUIDE	37
1. Basic Operations Review	
2. Advanced Operations Review	
F. MIDI GUIDE	38
1. MIDI for Organists	
2. Connecting RENAISSANCE to other MIDI Devices	
3. SmartMIDI™	
4. MIDI Transmission Channels	

INTRODUCTION

The Console Controller™ is an interface that controls many organ functions and a variety of MIDI functions. The Console Controller is pictured below and includes a window that displays functions, one at a time, as well as two rows of buttons used to make selections. Each window is described in this booklet.



A. BASIC OPERATION

1. START-UP SEQUENCE

Open the Console Controller drawer before turning the organ on. Now turn on the organ's main power switch. The window in the drawer will display:

**RENAISSANCE
BY ALLEN**

Next it will display:

**VERSION ----
please wait**

Then finally the Main window is displayed:

MEM - 1
00:00:00 am P

The symbol "U", "P", or "N" in the window's lower right corner indicates the organ's mode (See Section C-2).

WARNING: If a warning is displayed in this sequence, you should contact you Allen authorized representative immediately!

The Allen Organ includes self-testing features. Here are examples of what WARNING displays might look like when viewing the Console Controller display:

**Warning: Replace
Clock Module**

**Power Failure
REPLACE BATTERY!**

2. ADVANCING THROUGH THE WINDOWS

To advance the Console Controller display to the next window, press and hold the organ's **SET** piston. While holding **SET**, press the **R** piston. Each time you press and release **R**, the display will advance to the next window.



R is for RECALL. Repeat this procedure to advance through all of the windows until the last window is displayed. The last window will display:

**UNLOCK ALL
CAPTURE MEMORIES**

The displays will only advance. To return to any previous window, you must return to the main window and start the sequence over. **REMEMBER:** To return to the *Main Window* at any time, press and hold in the **SET** piston. While holding **SET**, press the **CANCEL** piston, and then release both pistons.



3. SELECTING THE CAPTURE MEMORIES

The main window must be displayed (see above). Then, locate the two buttons marked "↑" and "↓" on the Console Controller. Press one of these to move through the memories, forward or backward. The memories move sequentially forward from MEM 1 to MEM 2 to MEM 3, ...or backwards MEM 1 to MEM 16 to MEM 15, etc. as you press either the "↑" or the "↓" button. The number of available memories is dependant on the Allen organ. There may be 16 or less memories in an organ.

The memories allow you to save different registrations on each piston/toe piston. This means General Piston 1 on MEM-1 may be totally different from General Piston 1 on MEM-2, MEM-3, etc.

NOTE: On most Allen Organs (not customized organs) a factory set of registration examples is stored on each piston of the last available capture memory. You may change these registrations; however, they can then be restored to the original factory settings. Please see, **RESTORING FACTORY SETTINGS** in Section B-4, of this manual.

4. SAVING REGISTRATIONS USING PISTONS AND TOE STUDS

A **registration** is any combination of stoptabs and/or drawknobs. These registrations can be stored (remembered) by the organ's capture memory system. The pistons and toe studs/toe pistons provide a way to make changes quickly from one registration to another.

General Pistons are those that affect all stops and drawknobs on the organ. These are located on the left side, underneath the keyboards on the piston rails and are numbered 1 through 10.

Divisional Pistons affect only those stops associated with the particular manual above them. They are located in the center of the piston rails/keyboard and numbered 1 to 6.

Located just above the pedalboard are **Toe Studs**. Toe Studs to the left of the expression shoes duplicate the General Pistons (GEN-10, GEN-9, GEN-8, etc.). Those to the right of the shoes are pedal Divisional Pistons (PED-1, PED-2, PED-3, etc.).

To Save a Registration to a General Piston.

The main window in the Console Controller drawer must be displayed (*See Section A-2*). Select any memory number (MEM-2, MEM-3, ... MEM-16, etc.); however, for this example use MEM-1. (Press the "↑" or "↓" buttons, if necessary.) Next, select the desired stops/drawknobs you want General Piston 1 to remember. Once the stops/drawknobs are drawn, press and hold the **SET** piston, the press and release General Piston 1. Finally, release the **SET** piston. General Piston 1 will now store in memory the stops/drawknobs you selected. **NOTE:** General Pistons are often set gradually from soft to loud with General 1 the softest and General 10 the loudest.

To Save a Registration to a Divisional Piston.

The main window must be displayed, (*See Section A-2*). Select a memory (MEM-1, MEM-2, etc.) using the “↑” and “↓” buttons. Select the division stops/drawknobs you want the associated Divisional piston to remember. While holding the **SET** piston, press and release the Divisional Piston (1 through 6) you want to save to. Finally release the **SET** piston. The Divisional Piston pressed will now store the stops and/or drawknobs selected.

Saving Intermanual Couplers/Reversibles

The intermanual coupler’s, (e.g., Swell to Great, Great to Pedal, etc.) settings can be remembered only by the General pistons, not Divisional pistons (unless Divisional pistons are reconfigured. (*See Section B-2*).

Reversible pistons also control Intermanual couplers. These pistons reverse the condition of the related intermanual coupler. If an intermanual coupler is ON when the associated Reversible piston is pressed, that coupler will turn OFF. If the coupler is OFF when pressed, it will turn ON.

To Save Registrations using Toe Studs/Toe Pistons

Toe Studs/Toe Pistons can store registrations similar to General and Divisional pistons. Toe Studs allow stored registrations to be addressed using feet instead of hands. **NOTE:** Setting a General Toe Stud/Piston will change the registration for BOTH the toe stud and the corresponding hand piston, i.e. General Piston 10 is identical to General Toe Stud 10, while General Piston 6 is identical to General Toe Stud 6.

5. LOCKING CAPTURE MEMORIES

All memories, except Memory 1, may be locked or unlocked individually to prevent unintentional or unauthorized changes to that memory’s contents. Memory 1 remains unlocked as a convenience to visiting or substitute organists. The Console Controller must display the main window in the drawer (*See Section A-2*). Select the memory to lock by pressing “↑” and “↓”. After registrations are stored to pistons, (*See Section A-4*) choose three digits you can easily remember (e.g., 1-2-3, 0-0-7, etc.). Use General Piston 1 for the 1 digit and General Piston 10 for the zero digit. On the Console Controller locate the button with MEMORY beneath it. Press and hold this MEMORY button. While holding MEMORY, press the General Pistons that correspond to your three-digit code. Release the MEMORY button and an “L” will appear next to the MEM number in the window, indicating this memory is now locked.

MEM - 2 L 00:00:00 am P
--

As long as the memory remains locked, the piston registrations on that memory cannot be changed. Other organists will still be able to use the locked registrations, however, they cannot be changed. Remember; choose an easy to remember three-digit code.

6. UNLOCKING MEMORIES USING YOUR CODE

The main window must be displayed (*See Section A-2*). To unlock a memory using, select the memory to be unlocked, using the “↑” and “↓” buttons. Once selected, press and hold the MEMORY button on the Console Controller. While pressing MEMORY, enter the same three-digit code that was used to lock this memory (*See Section A-5*), using General Pistons 1 through 10

(Piston 10 = zero). Then release the MEMORY button. The "L" will disappear, indicating that this memory is now unlocked.

MEM - 2
00:00:00 am **P**

7. UNLOCKING ALL MEMORIES IF YOU FORGET YOUR CODE

Advance to the Last Window (*see section A-2*). It will display:

UNLOCK ALL
CAPTURE MEMORIES

Press and hold the MEMORY button on the Console Controller and press General Pistons 2-5-5. Release the MEMORY button, the window displays:

DONE!!

The display will automatically return to the Main window. All capture memories are now unlocked, including those memories, other organists may have locked. Registrations remain unchanged.

8. SETTING THE CLOCK

Advance to the SET CLOCK window. It will display:

SET CLOCK
00:00:00 am

Use the "↑" and "↓" buttons to change the digits and "→" and "←" to move between hours and minutes. Press and hold the **SET** piston. Then press and release the **CANCEL** piston to reset the clock. **NOTE:** The clock always resets the seconds to zero when you use **SET** and **CANCEL** to leave this window.

9. STOP ACTION and CAPTURE SELF CHECK

This feature self-checks the capture system. It tests to insure each stop is functioning properly and controllable by the capture system. Advance to the SELF CHECK window. It will display:

SELF-CHECK
(GT-1)

To start self-check, press Great Piston 1. The stop tablets will move down and up consecutively (drawknobs out and in). *If any stop does not move, notify your Allen service technician.* During this testing process you can interrupt and return to the Main Window. Do so by pressing and holding SET, then press the CANCEL piston simultaneously and then release both.

10. VIRTUAL ACOUSTICS™ SETTINGS

There are 21 Virtual Acoustic™ reverb pallets to select from. Of these, the DEFAULT setting that is not adjustable. The other 20 styles are adjustable. This allows an organist to modify the sound of the organ to accommodate a room's changing acoustical properties. (E.g., a room's reverberation characteristics become less as the number of people present increases. Also, a room's reverberation time changes when the room's windows are opened or closed.)

The rocker switch labeled VIRTUAL ACOUSTICS in the Console Controller drawer must be ON to hear the default reverb or one of the 20 customized Virtual Acoustic selections. The amount of reverb can be changed on the 20 customized selections and is shown in dB (decibels). The range of control is from 0 dB to -30 dB. -30 dB is the least amount of reverb and 0 dB is the most available. Advance to the 'SET REVERB' Window.

SET REVERB
--DEFAULT--

Use "↑" or "↓" to select one of the 20 adjustable Virtual Acoustic pallets. An example:

SET REVERB: 0dB
MEDIUM CHAMBER 3

Use "→" or "←" to highlight a field within the REVERB display. Use "↑" or "↓" to adjust REVERB input dB gain.

B. ADVANCED OPERATION

1. SELECTING AN ALTERNATE TUNING

Advance to the 'ALTERNATE TUNING' window.

ALTERNATE TUNING
= -----

(The current Alternate Tuning will appear after =)

Allen Organs offer seven *Alternate Tunings*, plus the standard Romantic Tuning. These tunings are accessible from the Console Controller. Select an *Alternate Tuning* by pressing the "↑" and "↓" buttons on the Console Controller. The organ's overall tuning will be changed to the selected *Alternate Tuning*, by pulling the drawknob, or stop tablet labeled ALTERNATE TUNING.

The selected tuning will remain the *Alternate Tuning* until: either another *Alternate Tuning* in the Console Controller window is selected, or the stop/drawknob is turned off. Any time the ALTERNATE TUNING stop is off, the organ is tuned to a standard general purpose tuning. The standard Romantic Tuning is "warmer" than CLASSIC and BAROQUE *Alternate Tunings*. In other words, most intervals are tuned slightly narrower than the intervals in the standard Romantic

Tuning. **NOTE:** The remaining tunings are of historical interest, but are limited in application to modern music. When selected, it is normal for some intervals to sound out of tune.

2. CONFIGURING DIVISIONAL PISTONS and GENERAL PISTONS

This procedure enables pistons to control stops/drawknobs that are normally not controlled by those pistons. Separate piston configuration changes can be made on each capture memory. E.g., (1) Divisional Pistons can be configured to respond like General Pistons. (2) Divisional Pistons normally *will not remember* the settings (on/off) of the Intermanual Couplers, (i. e., Swell to Great, Great to Pedal). Divisional Pistons can be configured such that the Divisional Pistons will remember the Intermanual Couplers' settings. (3) A Divisional Piston can be configured so that it will only affect the Tremulant stops in all divisions. (4) A General Piston can be configured to respond like a Divisional Piston.

NOTE I: Changing the configuration of a piston *will not affect the registrations* previously remembered by that piston prior to its reconfiguration. Piston configurations apply to all memories. **NOTE II:** Reconfiguring a piston does not change its MIDI channel assignment. Divisionals cannot make Expander II™ Preset group selections.

EXAMPLES:

Configuring Divisional Pistons to become additional General Pistons:

Advance to the 'CONFIGURE PISTONS' window.

**CONFIGURE
PISTONS**

Select *all* of the stops and drawknobs. Any stops/drawknobs not engaged, will not be able to be registered later. While holding in the **SET** piston, press the Divisional piston that you want to respond like a General Piston. Return to the main window to store General registrations to the Divisional pistons you pressed (*See Section A-4*).

To add the SWELL TO GREAT Intermanual Coupler to the Great Divisional Pistons:

Advance to the 'CONFIGURE PISTON' window.

**CONFIGURE
PISTONS**

Select *all* of the Great Division stops/drawknobs and the SWELL TO GREAT intermanual coupler. Press and hold the **SET** piston. While holding **SET**, press the Divisional Piston(s) that you will use when finished to save registrations. Return to the main window and save registrations to these Divisional Pistons, using combinations of stops/drawknobs and the SWELL TO GREAT coupler.

To reconfigure a Divisional Piston so it controls only the Tremulant stops/drawknobs:

Advance to the 'CONFIGURE PISTON' window.

**CONFIGURE
PISTONS**

Select all of the organ's Tremulant Stops/Drawknobs. Next press and hold **SET**. While holding **SET**, press a Divisional piston. Return to the main window. You can use this reconfigured divisional piston to control just the Tremulant Stops without affecting any other stops.

Restoring Original Factory Settings

See section B-4 for the window that displays:

**RE-INITIALIZE
PISTON CONFIG.**

REMEMBER: The examples above determine only which stops/drawknobs will become accessible by the reconfigured pistons; *they will not change previously saved registrations.*

3. MODIFYING THE CRESCENDO AND TUTTIS

The original factory settings include a second set of Tuttis and a second set of Crescendo settings that can be altered to suit the organist's needs. To view the current settings advance to the 'SET SECONDARY CRESCENDO AND TUTTIS' window.

**SET SECONDARY
CRESC AND TUTTIS**

To view the order that stops/drawknobs are turned on by Crescendo "B", slowly push open the Crescendo Shoe. You will see the stop/drawknobs turn on and off in response to the pedal movement when this window is selected.

To view the stops/drawknobs registered to the second TUTTI I or TUTTI II, press either TUTTI. If you press TUTTI I or TUTTI II when this window is displayed, the associated stops/drawknobs will turn on.

To Reset the Stops/Drawknobs Activated by Crescendo "B"

The Crescendo includes 22 positions evenly dispersed along the Crescendo Shoe's range of travel. Each of these 22 positions corresponds to a piston that must be set. They correspond as follows: General Pistons 1-10 represent Crescendo positions 1 to 10, Great Pistons 1-6 represent Crescendo positions 11 to 16, and Swell Pistons 1-6 represent Crescendo positions 17 to 22. Advance to the 'SET SECONDARY CRESCENDO AND TUTTIS' window.

**SET SECONDARY
CRESC AND TUTTIS**

When re-setting the Crescendo "B", use only the pistons and the stops/drawknobs, not the Crescendo Shoe. Start by selecting the stops/drawknobs to be remembered at Crescendo Shoe position 1. You can use all stops/drawknobs on the organ, including celestes, intermanual couplers, and tremulants; however, celestes and tremulants are automatically disabled when the louder voices are added, such as reeds or mixtures.

Once selected, press and hold **SET** and press General Piston 1, then release both. The Crescendo Shoe will now engage the same stops/drawknobs you selected, when you slightly push open the Crescendo Shoe. You must set a registration to *each* of the remaining 21 positions, even if you must duplicate a previous registration. For each remaining position, select the new stop(s) that you will add or use the same stops you selected for the previous position. It is normal to progress from quieter settings to louder ones.

Manually disabling Celestes and Tremulants:

You can manually disable the celestes and tremulants at any of the 22 Crescendo steps or Tutti I or Tutti II positions. Advance to the SET SECONDARY CRESCENDO AND TUTTI window.

**SET SECONDARY
CRESC AND TUTTIS**

Select the stops/drawknobs for the Crescendo step you wish to program or select a current Crescendo step or Tutti I or II position. If the current Crescendo step or Tutti position has already been programmed, the stops/drawknobs will turn on or off in respect to the Crescendo step or Tutti position selected. Turn the Transposer switch until the Transposer's Red LED lights. Press and hold the **SET** piston, then press the corresponding Crescendo step piston or Tutti I or II position to store the setting. To retain the manual disabling of the celestes and tremulants in a Crescendo sequence, the above procedure must be programmed into all subsequent Crescendo steps. After you complete this process, return to the Main Window (*See Section A-2*). **NOTE:** Registrations and memory settings for the PISTONS are not affected by resetting the CRESCENDO "B".

Play Organ Using Secondary Crescendo "B"

The Main Window must be displayed. Press the **CRES. B** piston.

**MEM - 1
00:00:00 am P**

On the bar-graph display, the green CRESC-B indicator will illuminate. Push open the Crescendo Shoe and play.

Change Registrations Activated When Secondary TUTTI-I/TUTTI-II Are Selected

Advance to the SET SECONDARY CRESCENDO AND TUTTI window.

**SET SECONDARY
CRESC AND TUTTIS**

Create a registration (select the stops) to be remembered by Secondary TUTTI I or TUTTI II. Press and hold **SET**. Next press the **Tutti** Piston you wish to change, and the release both. The new registration is now stored. It can be selected during normal playing conditions.

Play organ Using Secondary Tuttis

The Main Window must be displayed. Press the **CRES. B** piston.

**SET SECONDARY
CRESC AND TUTTIS**

On the bar-graph display, the green CRESC-B indicator will illuminate. Press the **Tutti** piston of your choice. The **Tutti** pistons function like General Pistons and customarily have large registrations. However, the registered stops / drawknobs do not move to their ON positions when a Tutti piston is selected.

4. RESTORING ORIGINAL FACTORY SETTINGS

Advance to the RE-INITIALIZE window.

**RE-INITIALIZE
PISTON CONFIG**

Certain functions can be restored to the original factory settings. They are:

RE-INITIALIZE PISTON CONFIG	RE-INITIALIZE MIDI SETTINGS
RE-INITIALIZE CAPTURE MEMORY XX	RE-INITIALIZE CRESC B SETTINGS
RE-INITIALIZE TUTTI/VENTIL B	RE-INITIALIZE AUDIO SETTINGS

Each of these functions can be restored individually. Select the factory settings you wish to restore by using the "↑" and "↓" buttons on the Console Controller. Press and hold the **MEMORY** button in the Console Controller drawer. While holding it, press General Pistons 2-5-5 in sequence.

If **TUTTI/VENTIL B** was selected, the window will display:

**RE-INITIALIZE
TUTTI/VENTIL B**

The original factory settings/registrations for the secondary TUTTI B function have been restored. Follow this procedure to restore each factory setting.

Notice the term VENTIL B. This is a function that is used on Allen custom organs. If you are playing most Allen organs you can disregard the term VENTIL B as it does not apply. If you are playing a custom model, the RE-INITIALIZE procedure described above will return the secondary TUTTI B as well as the VENTIL B settings to the original factory settings.

5. SOSTENUTO

NOTE: Only if your Allen organ has Software Version 2.02 or higher, then the Sostenuto feature is available on your model organ. *Sostenuto* is an Italian word meaning “sustained.” Unlike the sustain switch, which sustains any notes played as long as the sustain switch is held on, the *Sostenuto* switch sustains only the notes being held at the very moment it is pressed. Sostenuto is actuated by the organ’s Sustain switch (optional on some organs) located to the left of the Great/Pedal expression shoe. However, the Sostenuto function must first be enabled before using it.

Advance to the ‘SOSTENUTO’ window.

SOSTENUTO
GT = ON

The LCD will indicate what keyboard Sostenuto is assigned to and show the current on/off status. The keyboard that Sostenuto is assigned to cannot be changed, but the on/off status can. Use the “↑” and “↓” buttons to turn the Sostenuto function **ON** and **OFF**. Sostenuto will affect the internal voices of the organ as well as a MIDI instrument connected to the MIDI output. Keep in mind that the Sustain function will operate in tandem with the Sostenuto function. **NOTE:** Check your specific MIDI instrument’s owners manual to verify that it will receive and/or respond to MIDI Sostenuto messages.

6. GLOBAL TUNING

Global Tuning allows the organist to adjust the pitch of the entire organ. This tuning adjustment allows the organ to be tuned to another instrument more easily. Tuning can be adjusted either \pm 100 cents from A-440 pitch. To adjust Global Tuning, advance to the GLOBAL TUNING window and it will display:

GLOBAL TUNING
0

Use “↑” or “↓” buttons on the Console Controller to raise or lower the pitch. The tuning adjustment will be retained when the organ is powered off.

C. MIDI FUNCTIONS

This section deals with the MIDI capabilities of your organ. Knowledge of this section is **not** required for everyday use of the organ, normal service playing, or use of Allen SmartMIDI™ devices. This information’s usefulness will ultimately be determined by your needs, along with the type and capabilities of any external MIDI devices you choose to use--e.g., sequencers, voice/sound modules and external MIDI keyboards. The MIDI topics covered by this manual are limited in scope. You need to understand the terms MIDI-IN, OUT and THRU and their basic functions. To increase your understanding of MIDI you will need to read books that describe how to use MIDI. **NOTE:** You must also consult the owner’s manual that covers the external MIDI device you are using for more details.

1. STANDARD MIDI CHANNEL ASSIGNMENTS

These are the Allen Organs' standard MIDI channels settings:

Classical Organs	
Channel	Organ Division
1	= Swell
2	= Great
3	= Pedal
4	= Choir
5	= Solo
6	= Not Used
7	= G1/G2
8	= General

Theatre Organs	
Channel	Organ Division
1	= Great
2	= Accomp
3	= Pedal
4	= Solo
5	= Acc. 2 nd T
6	= Not Used
7	= T1/T2
8	= General

NOTE: The Base Channel always resets to Channel 1 whenever the organ is turned on (*see section C-5*).

2. SELECTING PROGRAM CHANGE MODES, VIEWING PROGRAM NUMBERS or GENERAL MIDI SOUND NAMES

Program change modes establish how MIDI program changes will be sent from the organ when a piston is pressed and what the resulting display will be in the Console Controller window. Once a particular program change mode is selected, the organ will retain this same program change mode (even if the organ is turned off) until a new program change mode is selected. During normal playing conditions, the main window displays one of three letters, "U", "P" or "N", in the lower right-hand corner to signify the current program change mode. These three mode options determine how the organ sends program change information to MIDI devices.

SELECTING A PROGRAM CHANGE MODE

Advance to the 'PROG CHG' window. It will display:

<p>PROG CHG: USER DISPLAY: NUMBERS</p>

Use the "→" and "←" buttons on the Console Controller to select either "Preset", "User" or "No" modes. **Note:** You must understand how to operate and when to use each of these modes before you change them!

“P” is for PRESET MODE: This mode causes the organ to send a program change number equal to the piston number that is pressed. The General Pistons will send program changes 1-10 on MIDI Channel 8, the organ's General Piston control the channel. The Divisional Pistons (1-6) for each division will send program changes 1-6 on the channels as shown on the previous page. For example, Swell Piston 1 will send Program Change 1 on Channel 1. Great Piston 2 will send Program Change 2 on Channel 2, etc., (*See Section C-6*).

“U” is for USER MODE: With this mode the organ is enabled to send program change information that will select voices, change banks, or change program “patch” numbers on another MIDI device. Any MIDI program change number from 1 through 128 can be assigned to any General or Divisional Piston (blank or no digit may also be selected). Any MIDI bank switch number between 0 and 127 can be assigned to any Divisional Piston. As in PRESET mode, General Pistons will send program change information on MIDI Channel 8. Divisional Pistons will send information on their respective MIDI channels. (*See Section C-6*)

“N” is for NO MODE: With this mode selected, NO information is transmitted or received. This mode cancels transmission and reception of all program change information.

3. GENERAL MIDI SOUND NAMES or PROGRAM NUMBERS

The Console Controller window can display MIDI program changes as either MIDI program numbers or as General MIDI sound names. Use the "↑" and "↓" buttons to select one of the two modes.

GENERAL MIDI SOUND NAMES

With General MIDI selected, the 'PROG CHG' window will display:

PROG CHG: USER
DISPLAY: GEN MIDI

Make sure the word USER is selected as the mode and that GEN MIDI has been selected following the word DISPLAY. You must advance to the next window then press a piston to view the sound names for any General MIDI device. The next window will display:

MIDI PROG CHANGE

As you press a General or Divisional Piston, the Console Controller window will now display the General MIDI sound name that corresponds to the MIDI program change selected. For example, press General Piston 1. The Console Controller will display the MIDI program change names.

GEN 1	BANK 0
P: Ac. Grand Piano	

NOTE: In some cases, the General MIDI sound name will be abbreviated in the Console Controller window.

PROGRAM NUMBERS:

With NUMBERS selected, the 'PROG CHG' window will display:

PROG CHG: PRESET
DISPLAY: NUMBERS

With PRESET selected as the program change mode, press a General or Divisional Piston. The Console Controller window will display the same MIDI program change number as the associated piston pressed. The MIDI program change number will be displayed in PRESET mode, no matter if NUMBERS or GEN MIDI is displayed. You must select USER mode to view GEN MIDI sound names. You must also select USER mode to assign MIDI program change numbers larger than 10 (the largest number of any piston).

With USER selected as the program change mode, along with NUMBERS, following the word DISPLAY you will be able to assign "--" (OFF) or any program change number from 1 through 128 to any General or Divisional Piston.

After selecting NUMBERS along with PRESET or USER, advance to the next window, then press a General or Divisional Piston to view the Program Change Numbers. The next window will display:

MIDI PROG CHANGE

After pressing a General or Divisional Piston, the Console Controller window will now display the number that has been selected for that piston. For example, press General Piston 1 and the display will change to:

GEN 1 BANK 0
P:----

There may be a number or "--" following the "P:". This "P:" represents the Program Change Number and does not stand for PRESET in this window. If there is "--" following "P:", this means that the "ZERO" Program Change Number will be sent from the associated piston.

Use the "↑" and "↓" buttons to change the Program Change Numbers. Use the "→" and "←" buttons to change the BANK Numbers (*See Section C-*). **NOTE:** The Allen organs use MIDI Program Change Zero as a message for "MIDI OFF." Therefore, MIDI Program Change 1 corresponds to the General MIDI sound "Grand Piano." Some MIDI devices do not use Program Change zero for MIDI OFF. Consequently, Program Change Zero, ("--" *in the window*) when sent from the organ, will correspond to Program Change 1 on those MIDI devices. Program Change 1 sent from the Allen will correspond to Program Change 2 on those MIDI devices etc.

4. ASSIGNING MIDI PROGRAM CHANGES TO ORGAN PISTONS

This function allows the organist to select any voice from an external MIDI device by pressing any General or Divisional piston on the organ. The "USER" program change mode must be selected (*See Section C-2*). **If the organ is equipped with an Allen MDS-Expander II™ or MIDI Division, then the selection procedure is simpler than the procedure described here.** However, the USER mode must still be selected. Please refer to the MDS-EXPANDER™ II Owner's Manual. Advance to the 'MIDI PROG CHANGE' window and it will display:

MIDI PROG CHANGE

For this example press the Swell Division Piston 1. The display will change to:

SW 1 BANK 0
P:----

The window displays the last piston pressed and the MIDI program number being sent by that piston. Use the "↑" and "↓" buttons to raise or lower the program number. A program number (1-128) will be transmitted on the channel assigned to the division from which you selected the piston; in this case, the Swell Division on Channel 1. (See Section C). **NOTE:** Changing a Divisional Piston to become a General Piston will NOT change the MIDI channel it transmits on. Therefore, Divisional Pistons cannot make group voice changes to an Allen MDS-Expander™ II or a MIDI Division™ II. Also, refer to the program number chart in the owner's manual of the external MIDI device you are using. Once you have assigned a MIDI program change number to a piston, that number will remain assigned to that piston even if the organ has been turned off and on again.

5. MIDI BANK SELECTING

Many MIDI devices permit access to a variety of sounds in addition to the General MIDI sounds. Normally these additional sounds are stored in groups called BANKS. A BANK in MIDI terminology means a group of voices or sounds. There are two levels of banks. One level offers two choices, High Bank and Low Bank. Each of these, High Bank and Low Bank, has as sub-groups other level of banks, BANK Numbers.

MIDI devices can have as many as 128 sounds/voices per BANK Number. There are also 128 BANK Numbers (Ø through 127). Therefore it is possible that a MIDI device that is only High Bank or Low Bank compatible. With 128 BANK Numbers, each could contain up to 128 voices/sounds, for a total of 16,384 sounds. Think of these BANK Numbers as floors or stories in a tall building. Each floor would contain 128 rooms and each room could then contain 128 voices.

There are MIDI devices that are High Bank and Low Bank compatible. It would be possible for these MIDI devices to have as many as $(128 \times 128 \times 2 = 32,768)$ voices/sounds in each of the 128 BANK Numbers, in each of the High and Low Banks. Most MIDI devices do not use all of the locations available. It would be very expensive as well as difficult to remember the address for each sound location. There are also MIDI devices that offer only General MIDI sounds/voices. These General MIDI devices may operate using High Bank or Low Bank, but only the sub-group Ø Bank Number is used to store the 128 General MIDI sound settings. Allen Organs are able to access any of the Banks and therefore can communicate with all MIDI devices. **NOTE:** You MUST know the capabilities of, and understand how to operate, the MIDI device you intend to use with any organ!

SELECTING HIGH BANK or LOW BANK:

Advance to the 'MIDI BASE CHANNEL' window. It will display:

MIDI BASE CH: 1 BANK: LOW
--

Use "→" and "←" buttons on the Console Controller to select either HIGH or LOW Bank priority.

SELECTING MIDI BANK NUMBERS:

Bank Numbers are assignable the same way MIDI Program Numbers were (See Section C-3); except you must only select from the Divisional Pistons. Using a BANK Number to select an external MIDI Device sound/voice can be done from any of the Divisional Pistons. You MUST

have USER mode selected in the 'PROG CHG' window! Advance to the 'MIDI PROG CHANGE' window and will display:

MIDI PROG CHANGE

For this example press the Great Division Piston 1. The display will change to:

GT 1 BANK 0
P:----

The window displays the last piston pressed, the MIDI BANK Number, and the program number being sent by that piston. Use the “→” and “←” buttons on the Console Controller to select MIDI BANK Number. The BANK number (0-127) will be transmitted on the channel assigned to the division from which you selected the piston, in this case, the Great Division on Channel 2. (*See Section C 1*). Also, refer to the Bank selection/program number chart in the owner’s manual for the external MIDI device you are using.

Once you have assigned a MIDI BANK Number to a piston, that number will remain assigned to that piston even if the organ has been turned off and on again.

6. CHANGING THE MIDI BASE CHANNEL

This allows you to change the setting of the MIDI Base Channel. The Base Channel is a reference point to establish the positioning of the other 15 MIDI channels. On Allen Organs, the Base Channel equals the Swell’s channel of transmission (i.e., if the Base Channel = 1, then the Swell Channel = 1, if the Base Channel = 2, then the Swell Channel = 2, etc.). Moving the Base Channel allows you to shift the organ’s range of MIDI channels, helpful when reassigning an external MIDI device from one organ division to another. **NOTE:** The Base Channel always resets to Channel 1 whenever the organ is turned on.

Advance to the 'MIDI BASE CH' window and it will display:

MIDI BASE CH: 1
BANK: LOW

Use the "↑" and "↓" buttons to change the Base Channel. All functions associated with a particular division will transmit and receive on its assigned channel. For example, MIDI Channel 1 is normally assigned to the Swell Division and the Swell Manual. Therefore, keying velocity or on/off messages, and program changes (Swell Divisional Pistons) will be transmitted and received on Channel 1 (*See Section C-1 for Allen MIDI Channel Assignments*).

If the Base Channel is reset to 2, in the display all of the channels will shift higher by one. Now, Swell = 2, Great = 3, Pedal = 4, Choir = 5, and the General Pistons = 9. **NOTE:** Channel numbers will wrap, i.e. channel numbers go only to 16 and will then repeat to 1. **FOR NORMAL USE, DO NOT USE A BASE CHANNEL LARGER THAN 9.**

7. MIDI EXPRESSION SETTINGS

Advance to the 'MIDI EXPRESSION' window and it will display:

**MIDI EXPRESSION
POLY - VOLUME**

There are four modes for transmitting expression data via MIDI. They are selected by pressing the "↑" and "↓" buttons on the Console Controller.

POLY-VOLUME — This setting will always be selected when the organ is turned on. In this mode the expression data is distributed among the appropriate MIDI channels. This is the proper mode to use when recording to, or playing back from, a sequencer.

POLY-VELOCITY — This mode should be selected if you are using a percussion-type voice from a sound module or an external MIDI keyboard. For example, if a digital piano sound were played from the organ keyboard through MIDI Channel 1, the piano could be made to sound more realistic. By opening the Swell expression shoe, the piano strings would appear to be struck harder than when the Swell pedal was in the closed position. **NOTE:** In POLY-VELOCITY mode, all expression information is sent in key velocity form. Changes in velocity will occur only when a new key is struck. Consequently, if you change the position of the Swell pedal after a key is struck there will be no change in velocity until a new key is struck. Use this mode only when a velocity-sensitive external MIDI device is connected. If this mode is selected when recording to a sequencer, the expression on the organ will not function when playing back from the sequencer.

SWELL-VOLUME — This mode causes MIDI expression data to be sent only on the Swell MIDI channel. Some early sequencers can only interpret one volume message.

NO EXPRESSION — No MIDI expression (volume) data sent.

8. MIDI SUSTAIN KICK SWITCH

A lever located to the left of the Great/Pedal expression shoe (optional in many organs) and controlled by the organist's foot, operates MIDI sustain. This function can be assigned to any one of or all of the instrument's manuals. Advance to the 'MIDI SUSTAIN' window and it will display:

**MIDI SUSTAIN
Sw = ON**

Use the "→" and "←" buttons to select **Sw, Gt, Ch or Pd**. Use the "↑" and "↓" buttons to turn the selected manual **ON** and **OFF**. **OFF** will cause no sustain information to be sent, **ON** will cause MIDI expander voices to sustain or decay slowly. An example is when the **PIANO** voice in a voice module has been selected. When the sustain is **ON**, the piano is played and the foot controlled lever is pressed, the piano sound will slowly decay.

9. TRANSFERRING and SAVING CAPTURE MEMORY DATA TO A SEQUENCER

CAPTURE MEMORY refers to: all of the remembered piston registrations on all available Memories, plus all 22 Crescendo "B" position settings and the Secondary Tutti "B" settings.

With this operation, the organist can copy and save all of this stored (remembered) information to a MIDI digital sequencer. **NOTE:** This operation is not required if you are using an Allen Smart Recorder™ to save capture memories. Refer to the Smart Recorder™ Owners Manual for details. Advance to the 'CAPTURE MEMORY SAVE' window and it will display:

**CAPTURE MEMORY
SAVE**

Set your sequencer to the record mode and begin recording as you normally would. Press and hold the MEMORY button on the Console Controller. While holding MEMORY, press General Pistons 2-5-5 in sequence. The CAPTURE MEMORY information will be transmitted to the sequencer. During the memory data transfer process the window will display:



A copy of the CAPTURE MEMORY information will exist in the sequencer and the original information will be retained in the Console Controller™ memory.

10. RETURN CAPTURE MEMORY DATA FROM A SEQUENCER TO ORGAN.

To replace previously recorded Capture Memory information into the organ from your sequencer, simply press "Play" on the sequencer and the recorded capture data will be transmitted to the organ. You must have a MIDI cable from the OUT port of the sequencer to the IN port of the Allen Organ. It does not matter what number window the Console Controller displays. **NOTE:** Capture Memories must be unlocked (see section A-6) before you press "Play" on the sequencer, allowing the organ's available memories to receive capture information. It is a good idea to first save whatever is stored in the organ's memory because, it will be erased by this procedure.

11. TRANSMITTING STOP DATA

This operation allows the organist to turn off the transmission and reception of individual stop data, known in MIDI terminology as "Non-Registered Parameters". In some cases individual stop data (on/off) from the organ may conflict with data from an external MIDI device. When this occurs, select the "OFF" position by pressing the "↑" and "↓" buttons. **NOTE:** Piston changes will still be transmitted and received, because they are program changes.

Advance to the 'TRANSMIT / RECEIVE STOPS' window and it displays:

**TRANSMIT / RECEIVE
STOPS ON**

Press "↑" and "↓" buttons to change transmit/receive mode.

D. PERFORMANCE RECORDER™ OPERATING INSTRUCTIONS

The Allen Console Controller includes an internal sequencer called the Performance Recorder™. It allows you to record and playback music, note for note, with expression and registration changes, including any piston selections. Recordings can be made from the Allen console or from an external MIDI keyboard connected to the MIDI ports.

The Performance Recorder is an easy-to-use sequencer designed for performance review to aid organists. It enables organists to listen to a performance from various locations in a room and make judgments regarding volume and registration, as listeners might hear the organ. If a more feature-oriented sequencer is required, the more advanced Allen sequencers are available from your local Allen representative.

1. SELECTING RECORD/PLAY-BACK MODES

All Performance Recorder operations are controlled by the lower row of buttons on the Console Controller. Pressing any one of the three buttons (RECORD, STOP/CONTINUE or START) will cause the window to display the Performance Recorder™ mode:

00000	STOP
MEM = 100%	SP=100%

NOTE: The number in the upper left corner of the window is the counter number for the recorder. 00000 (all zeros) indicates the starting point.

2. START RECORDING

To start recording, press and hold the **RECORD** button (lower left). While holding RECORD, momentarily press the **START** button. Position the Expression Shoes, press a piston or select stops/drawknobs and begin to play. **CAUTION! ALL PREVIOUSLY RECORDED MATERIAL WILL BE ERASED when you start recording.**

NOTE: At the beginning of a recording, the sequencer automatically checks which stops/drawknobs are currently engaged, as well as the current expression pedal, Crescendo Pedal, and Tutti settings. Therefore, to minimize registration time (silence) during playback, set your registration before starting the Recorder. Registration information is then placed at the beginning of the recording. Upon playback, the organ is automatically returned to the same settings that were selected at the beginning of the original recording. When you have finished playing, press the STOP/ CONTINUE button to pause the recording. You can playback what you recorded by pressing START.

3. PLAYING BACK A RECORDING

IMPORTANT - BEFORE STARTING any playback sequence, be sure the EXPRESSION SHOES are FULLY OPEN. The Performance Recorder mode window must be displayed to play back previously recorded material. Press the START button and the sequencer will play from the beginning the material saved in its memory. The counter number will start at the all zeros position. The stops will turn on and the organ will play.

If you want to start anyplace in the counter number sequence other than all zeros, see CONTINUE PLAYBACK below.

To STOP PLAYBACK

Press the button marked STOP/CONTINUE.

To CONTINUE PLAYBACK

To continue playback when the sequencer is stopped at a given point other than all zeros, press the **STOP/CONTINUE** button. **NOTE:** When continuing playback from any point after the starting point of a recording, the registrations will not automatically reset. **BE SURE THE APPROPRIATE STOPS HAVE BEEN SELECTED BEFORE CONTINUING PLAYBACK FROM WITHIN A RECORDING. IF PISTONS WERE USED DURING RECORDING, BE SURE THE SAME CAPTURE MEMORY IS USED DURING PLAYBACK.**

4. POSITIONING THE COUNTER NUMBER

The Performance Recorder™ (internal Console Controller sequencer) is designed to make single recordings starting at number 0000. Once a recording is made and the “Stop/Continue” button is pressed to stop the recording session, the user begins playback from the counter position 0000 using the “Start” key.

5. CHANGING PLAYBACK SPEED

While stopped, or during playback, the playback speed can be gradually increased or decreased by using the “↑” and “↓” buttons. The playback speed ranges from 50% to 200%, with the original recorded rate being 100%. Changes are made incrementally and remain in effect until further adjustments are made or until the organ’s power is turned off.

Turning off the organ’s power will automatically reset the playback speed to the originally recorded speed (100%). During playback, you can press and hold the “←” button to reduce the playback speed instantly to 50% of the recorded speed. Releasing this button returns playback to its original speed. Pressing and holding the “→” button during playback will instantly increase (double) playback speed to 200% of recorded speed. Releasing this button returns playback to its original speed. This process is especially useful in scanning an existing recording to locate a desired point for continuing playback or recording. Upon reaching the desired point in the recording, press STOP/CONTINUE to stop playback.

6. RECORDING AN EXTERNAL MIDI DEVICE

Input from an external MIDI device can be recorded to the sequencer. Make sure the MIDI OUT of the external device is connected to the Allen Organ MIDI IN. The same rules apply when recording from an external MIDI sequencer. **NOTE:** The external MIDI device’s current tonal and expression settings ARE NOT recorded automatically at the beginning of recordings. For this reason, it is best to **START** recording before setting registration and expression levels of external devices.

For the external MIDI device to play on playback, the MIDI stop for the appropriate division on the organ must be turned on, and the MIDI OUT of the organ must be connected to the MIDI IN of the external device. The audio output of the device must also be connected to an audio system.

CAUTION! Make sure that the external MIDI device has been properly programmed to transmit the types of messages desired (MIDI channel selected, program changes, control data, etc.) before recording is started.

7. RETURNING TO THE MAIN WINDOW

To return to a normal playing mode, press MEMORY on the Console Controller, or press and hold the SET piston, press the CANCEL piston, release both. Either method gets the same result.



E. QUICK REFERENCE GUIDE

1. BASIC OPERATIONS REVIEW

a. ADVANCING THROUGH THE WINDOWS:

Hold SET, press "R".

b. RETURN TO THE FIRST WINDOW:

Hold SET, press CANCEL, release both.

c. SETTING PISTONS:

First window. Select desired registration. Hold SET and press piston to remember registration.

d. SELECT MEMORY AND LOCK IT:

First window. Select desired memory using "↑" and "↓" buttons. Press and hold MEMORY, enter three-digit code, release MEMORY, "L" will appear.

e. UNLOCK A MEMORY:

Repeat d. above. "L" will disappear.

f. UNLOCK ALL MEMORIES WITHOUT CODE:

Advance to display "Unlock All Capture Memories". Press and hold MEMORY, press General Pistons 2-5-5, release MEMORY. Window will display "Done!"

g. SET CLOCK:

Advance to display: "Set Clock". Use "↑" and "↓" to change the digits. Use "→" and "←" to move from hours to minutes. Press and hold SET, press CANCEL, release both to reset clock.

h. SELF-CHECK CAPTURE AND STOP ACTION:

Advance to display: "Self-Check". Press Great Piston 1. To discontinue, Press and hold SET, press CANCEL, release both, and return to the main window.

2. ADVANCED OPERATIONS REVIEW

a. RECONFIGURING PISTONS:

Advance to display: "Configure Pistons". Select the desired stops. Press and hold SET, press the desired piston. Return to First Window (press SET and CANCEL) and set new registrations (*see section E-1, c.*).

b. SET SECONDARY CRESCENDO "B":

Advance to display: "Set Secondary Cresc. and Tuttis". Set stops in all 22 positions (Generals 1-10, Great 1-6, and Swell 1-6) just as you would set pistons. YOU MUST SET ALL 22 POSITIONS EVEN IF YOU DUPLICATE A PRIOR SETTING.

c. SET SECONDARY TUTTIS:

Advance to display: "Set Secondary Cresc. And Tuttis". Select stops. Press and hold SET, press the Tutti piston you want to memorize setting. In normal play, press Cres B piston, and then press Tutti Piston I or II to access memorized registration.

d. RESTORE FACTORY SETTINGS:

Advance to display: "Re-Initialize Piston Configuration". Use "↑" and "↓" to select the settings you want to restore. Press and hold MEMORY, press 2-5-5 using General Pistons.

F. MIDI GUIDE

1. MIDI FOR ORGANISTS

The term MIDI is an acronym for Musical Instrument Digital Interface. MIDI has been adopted by the music industry as a standard means of communication between digital musical devices enabling devices of different types and manufacturers to communicate. MIDI by itself will not make a sound. It is not necessary to understand all of the technical aspects of MIDI in order to take advantage of the benefits it offers. It is important to explore the potential MIDI holds for musicians, as well as the various MIDI applications available today.

TYPES OF MIDI DEVICES

MIDI devices fall into two categories.

1. The first category consists of musical instruments such as organs and synthesizers that transmit and receive MIDI data.
2. The second category includes controllers and processors that, as their name implies, can transmit, receive or manipulate MIDI data, but do not necessarily produce sound themselves. Sequencers, which are MIDI recording devices, fall into this category. Although the technical nature of their recording and editing processes differs from those of a tape recorder, many operate in similar fashion. Most are equipped with record, playback, fast forward and reverse controls that function in the same way as their tape recorder counterparts.

TYPES OF MIDI DATA

There are several types of MIDI messages that can be sent from one device to another. The most common is keying information, allowing one device to sense which keys have been played on another device. This means an organ equipped with MIDI can send information to other MIDI devices, e.g., synthesizers or sequencers, and can play those devices simultaneously or record information to be played back later.

Allen Organs incorporate an advanced MIDI system allowing the transmission and reception of all types of MIDI information (velocity keying, volume change, sustain, registrations, Crescendo settings and more). It is even possible to control several devices from one manual simultaneously, or control a different device from each manual of the console.

MIDI AS A PRACTICE TOOL

For the organist/choir director, the MIDI organ console and sequencer are valuable rehearsal tools for both choral and organ works. Anthem accompaniments may be recorded in advance and played back by the sequencer during choir rehearsal. The director, freed from the role of accompanist, can focus entirely on directing the choir. The sequencer can play the music back at a slower tempo without affecting pitch, or at a lower pitch without affecting tempo, features that are useful in rehearsing difficult choral passages.

If the sequencer allows multi-tracking, each vocal section's part may be recorded on a different track, and then played back individually, or in any combination, for more flexibility. Multi-tracking can also be used in teaching and learning new organ works. The teacher may record each hand or pedal part on a different track, allowing the student to "mute" or turn off any part being practiced while still being able to hear the sequencer play the rest of the composition. The student's ability to hear the piece in its entirety from the earliest stage of learning a composition, and to become aware of the interrelationship of its voices, is especially valuable in learning contrapuntal works.

MIDI AS A REGISTRATION TOOL

In some churches and auditoriums it is difficult to judge the effectiveness of a registration from the organ console. Due to the acoustics of the room, or positioning of the console, the sound of the instrument may be different when listened to from the congregation's or audience's vantage point. MIDI allows the organist to evaluate registrations by recording the music using a sequencer, and then listening from different locations in the room during the music's playback.

OTHER MIDI USES

MIDI has created new possibilities for the organist. The ability of the organ console to control external keyboards or sound modules puts an ever-increasing array of non-traditional sounds at the organist's fingertips. A superior degree of control is made possible by the flexibility of an organ console. The ability to record MIDI data using a sequencer opens a variety of new possibilities during practice and performance situations.

Computer software programs are also available that allow musicians to play MIDI devices connected to a computer, and have their performance printed as conventional five-line musical notation. Because MIDI is an industry-wide standard, today's MIDI instruments will be compatible with tomorrow's MIDI innovations.

2. CONNECTING ALLEN ORGANS TO OTHER MIDI DEVICES


Allen Organs can be connected to a variety of MIDI devices. A connecting diagram for a variety of MIDI devices can be found at the end of this section. Although the diagram is not meant to be an exhaustive list of possibilities, it illustrates the most commonly used connections of MIDI devices. If more specific information is required, please consult the owners' manuals of the external devices being connected to the organ.

3. SmartMIDI™

Allen Organs organ feature SmartMIDI™, an expanded MIDI system with increased flexibility. SmartMIDI™ provides a comprehensive interface between MIDI sound modules, such as the Allen MDS-Expander II™, and digital sequencers such as the Allen Smart Recorder™. Two MIDI Out ports, one switched and one unswitched, allow unprecedented control over external MIDI devices attached to the organ.

Under normal circumstances, MIDI sound modules should be connected to the switched MIDI port labeled MIDI OUT 2. Doing so allows the organist to disable the sending of MIDI data from the

organ to the sound module. Devices such as MIDI sequencers should be connected to the unswitched MIDI port labeled MIDI OUT 1, eliminating the necessity of having to draw the MIDI stop controls before recording a digital sequence. The drawing below illustrates the proper procedure for connecting the Allen MDS-Expander™ and Allen Smart Recorder™ to a Allen Organ.

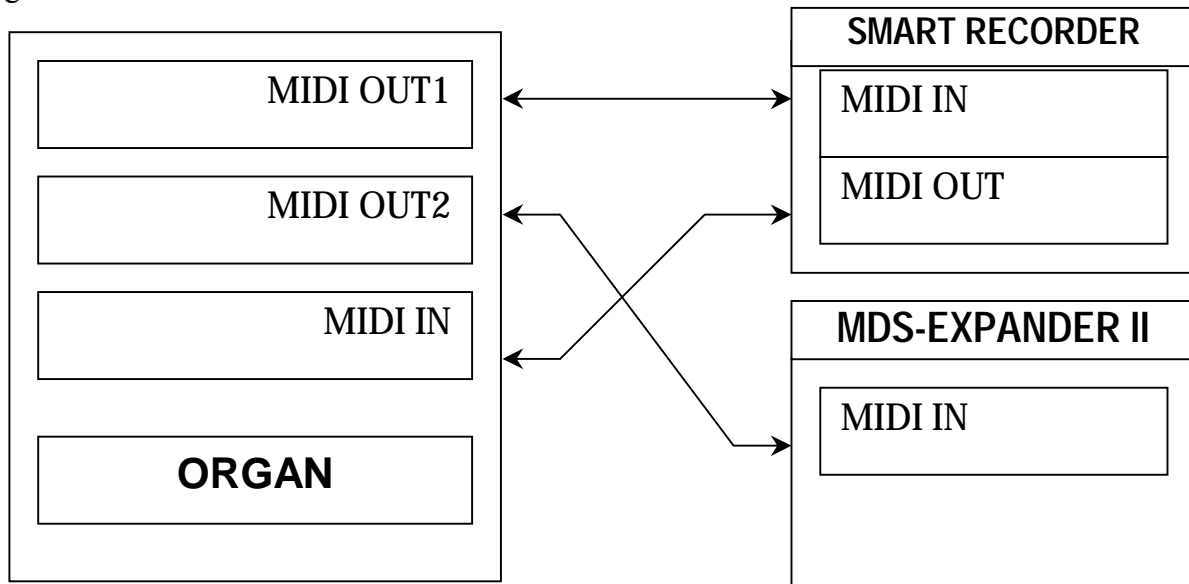

4. MIDI TRANSMISSION CHANNELS

MIDI information may be transmitted on several different channels simultaneously. This allows many channels of information to be sent through one cable and used independently from one another, similar to the way many television broadcasts can be sent through one cable. In order to receive the intended information, a MIDI device must be tuned to the same channel as the device that is sending the information.

Your Allen Organ transmits MIDI information on several channels. When external MIDI devices are connected to the organ, it is important to make sure that the devices' channels of transmission and reception match the MIDI channels of the Allen Organ divisions to which they are assigned.

MIDI Program Change Messages are transmitted from the organ's General Pistons on MIDI Channel 8. These program change messages can be used to change the settings of MIDI sound modules or synthesizers that are connected to the organ. Please consult the owner's manual of your MIDI device(s) for more information on how MIDI Program Change Messages are handled by that particular device.

In addition to keying and divisional registration information, MIDI Volume Messages are sent on the individual MIDI channels for each division of the organ. These volume messages are controlled by the division's expression shoe. In this manner, the volume of connected MIDI devices may be controlled.

Please consult the owner's manual of your MIDI device(s) for more information on how MIDI Volume information is handled by that device. If any external MIDI device is used to transmit information to the Allen organ, the same assignment of MIDI channels must be used as described elsewhere in this manual.